 
 


## Waste Ink Counter Reset

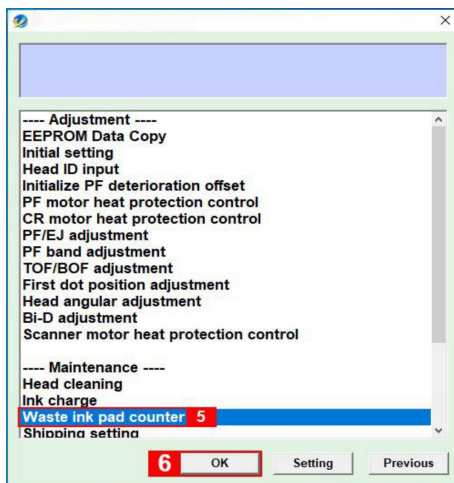

The ink pad stores waste ink from printhead cleaning cycles. Your printer will notify you to replace it once the pad reaches its capacity. When error code "E-11" appears, the ink pad requires replacement, and the waste ink counter must be reset. This instruction is for EPSON Ecotank ET-2720 ET-2800 ET-2803 ET-2400 ET-4700 ET-4800 ET-2850 ET-2760 ET-2750 ET-2700 printers. If your printer is not listed, please contact us for more info.

1. On a **WINDOWS** system computer, visit [www.wicresetpro.com](http://www.wicresetpro.com) download the file for your printer model and unzip it.
2. Launch the **Adjustment Program** and select your printer in the right port. Then select **Particular Adjustment Mode**. Make sure your printer is cable connected to your computer, a print jobs are cleared.

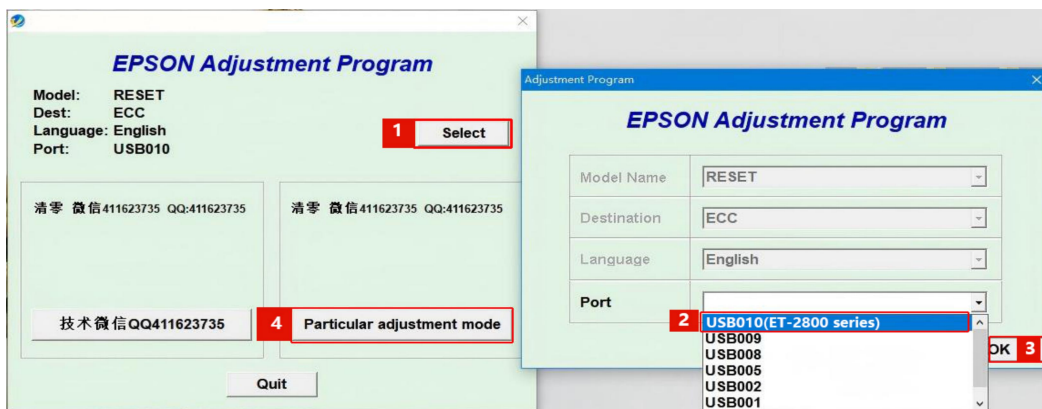

 
3. Select **Waste Ink Pad Counter** then **OK**.



4. Check all boxes and select **Initialize**.



5. Click **OK** to proceed.

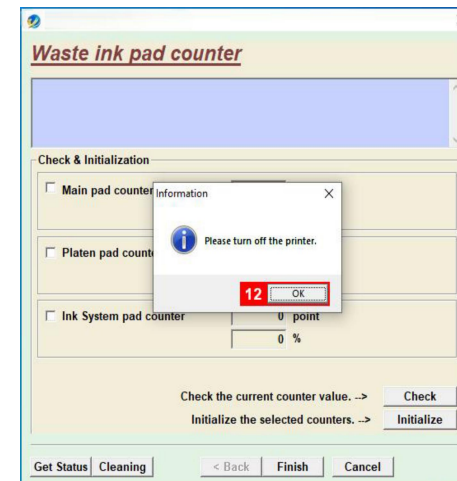

6. Reset is complete.

Restart your printer manually.

**NOTE:** If files are mistakenly flagged as malware, temporarily disable your browser security ; antivirus protection. You can enable them anytime after resetting process is finished.

If reset fails / software are not responding in the final step, try below steps:

1. Delete the printer in the computer.
2. Visit [www.wicresetpro.com](http://www.wicresetpro.com), download your printer's **Driver and Utility Combo Pack**.
3. Run the **installer** and follow the instruction step by step to add your printer again.
4. Try the resetting process again.

If more help is needed, please contact:

Email: [wicresetpro@gmail.com](mailto:wicresetpro@gmail.com)

Whatsapp: +1 (302) 391 0720



[www.wicresetpro.com](http://www.wicresetpro.com)



Email



Whatsapp